



# Gateway Update Instructions


- Unzip The Firmware Update File And Locate The [ Tool ] folder.

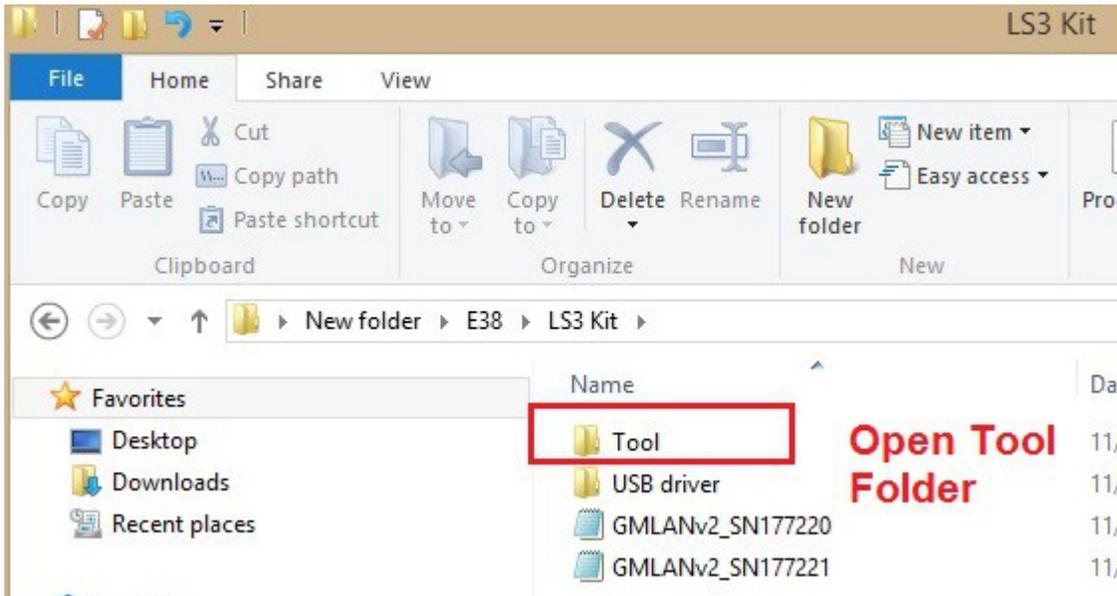


- Inside The [ Tool ] Folder, Run Program DFUSec.exe.

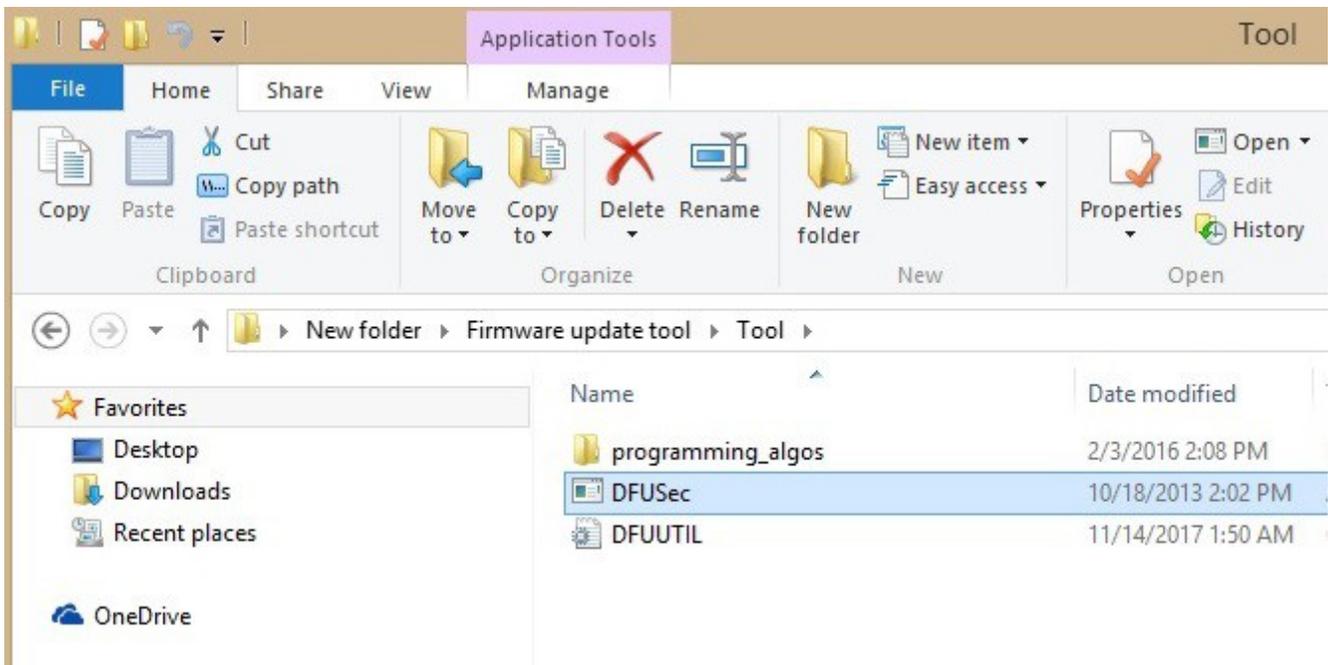

- **DFU (Program Mode), Set Path To The New Firmware File.**

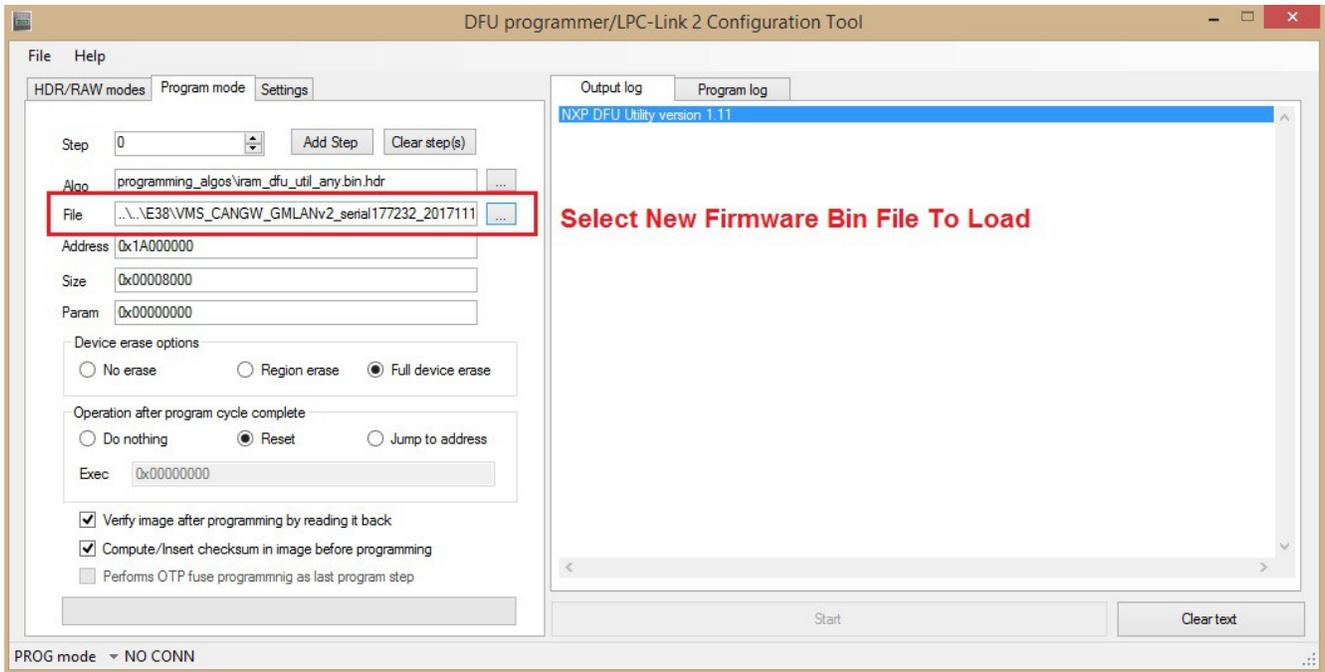


- **Remove 4 Screws And Open Gateway Enclosure.**

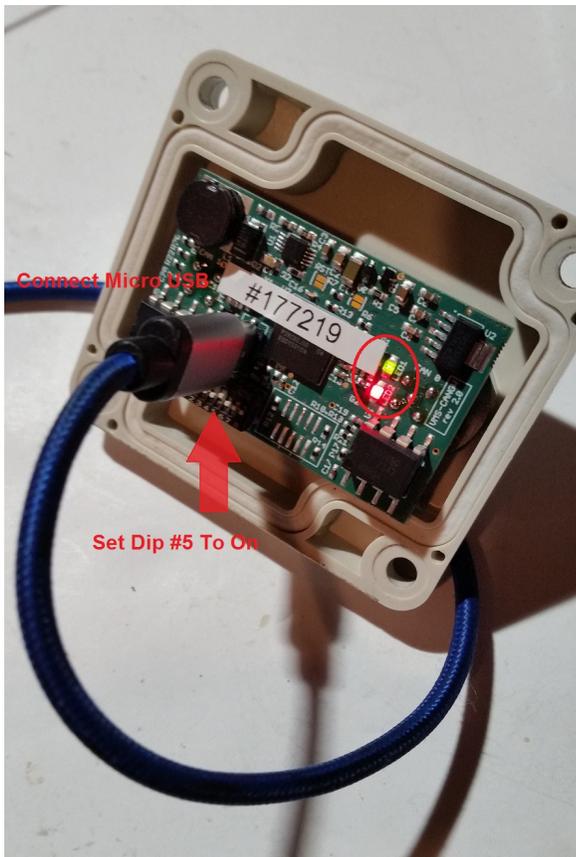


- **Locate The Eight Position DIP Switch.**
- **Set Position # 5 to ON.**
- **Connect A Micro USB Cable To Gateway and Computer.**
- **Both Green and Red LED's Should Be Illuminated.**
- **The Gateway Is Now In Programming Mode**

- In The DFU Tool, Verify USB Connection. Press Start Button.

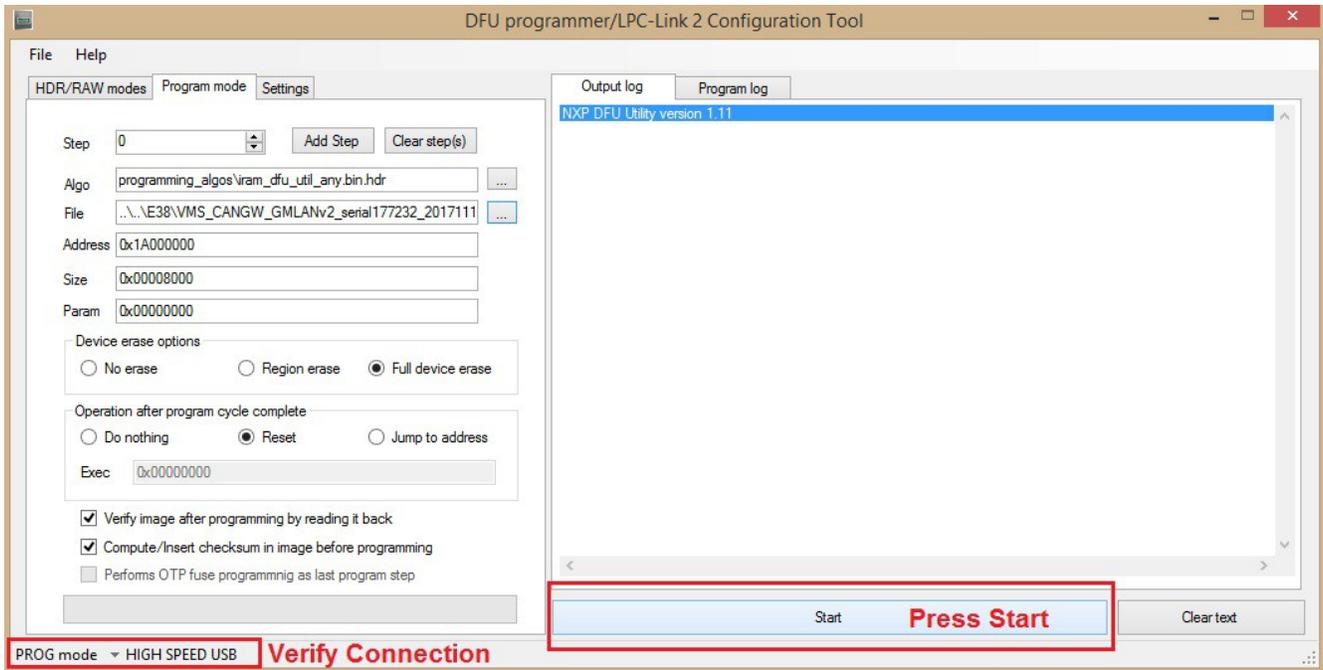

- Look For Upload Successful Statement.

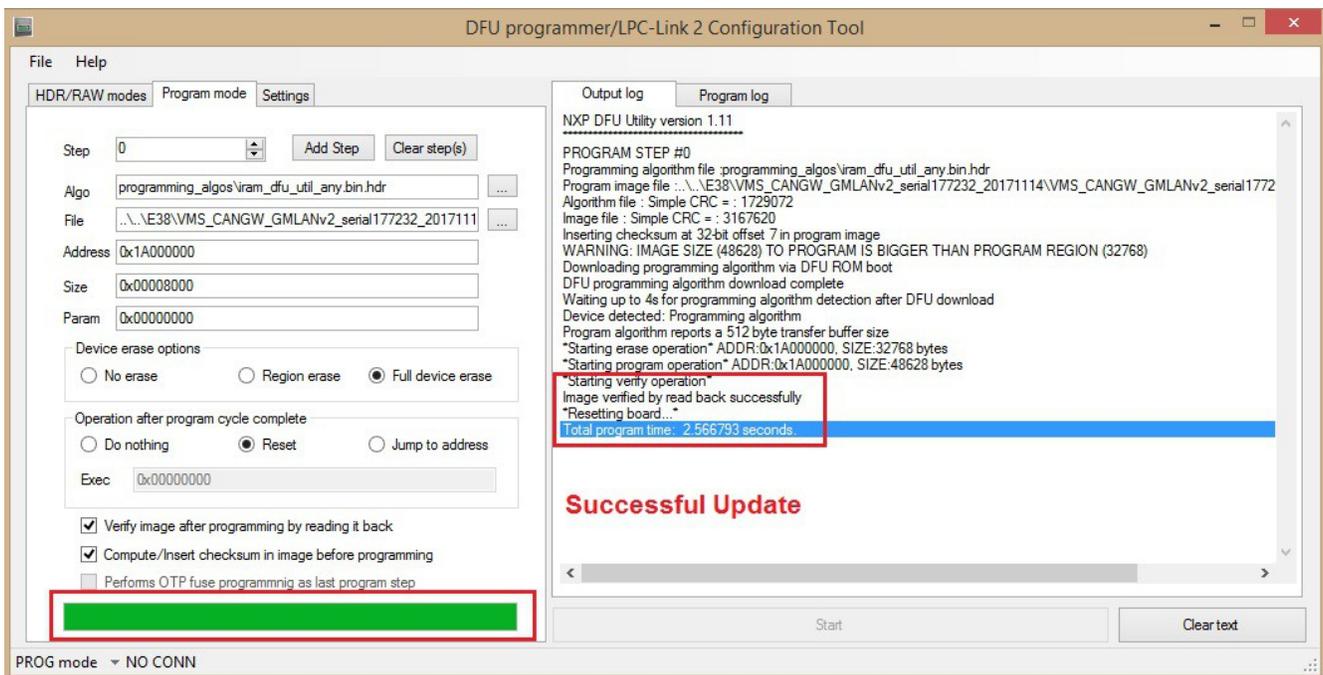

- Update Is Now Complete. Disconnect USB Cable.
- Set DIP #5 Back To The Off Position.
- Reassemble The Gateway Enclosure.